

LED Emergency Battery Backup Box





Certification:

- Class I, Division 1, Groups C, D
- Class I, Division 2, Groups A, B, C, D
- Class II, Division 1, Groups E, F, G
- Class II, Division 2, Groups F, G
- Class III
- UL 844 Hazardous Locations
- UL 924 Emergency Lighting
- UL 1598A Marine Outside Type
- UL 1598 Wet Locations
- UL 8750 LED Safety
- ETL
- NEMA 4X
- IP66 / Wet Locations
- Impact level: IK10 (enclosure)

Specification:

Features:

- 3-hour emergency operation
- Hinged access door.
- Provided with 3/4" NPT or M25 conduit hubs.
- Working temperature: -40°C to +65°C (-40°F to +149°F).
- Long lifespan up to 50,000 hours.
- 10-year limited warranty.

Standard Materials:

- Housing: A360 die-casting aluminum
- Hardware: Stainless steel

Model Number	Input Voltage	Emergency Time	Currency
LL-EBEP	Max. AC800V	3 hours	Cable Cross Section: 2.5mm ² 24A Cable Cross Section: 4.0mm ² 32A Cable Cross Section: 6.0mm ² 41A Cable Cross Section: 10mm ² 57A Cable Cross Section: 16mm ² 76A Cable Cross Section: 35mm ² 125A Cable Cross Section: 70mm ² 192A Cable Cross Section: 240mm ² 400A

Packing Information:


Model	Quantity/Carton	Packing Size	Net Weight	Gross Weight
LL-EBEP	1 Pc	430x424x276mm/ 16.93x16.69x10.87inch	8.0kg/17.64lb	9.5kg/20.94lb

LITELUME[~] ©Lite Lume Corporation 2018 www.litelume.com info@litelume.com 833.LED.LUME


n Page 1/6 n Rev Date: 01/9/2024




Dimension

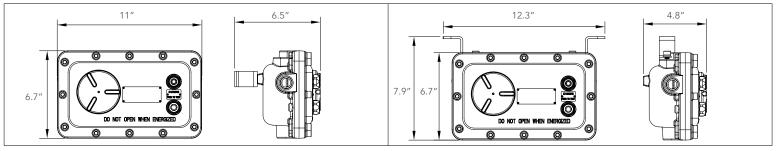


Installation: Wall Mounting

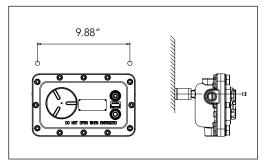


1. Drill two holes on the wall as fig. 1, the distance as per 9.88".

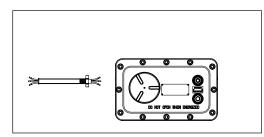

3. Remove the junction box cover (spiral cover) and insert the power cable into the junction box. Then connect the AC cable: black cable joins to L, white cable joins to N, green cable joins to grounding. Further, fill 16mm of chemical filler into the conduit and fix the conduit to the lamp body (it must be confirmed whether there are suitable gaskets before installation).

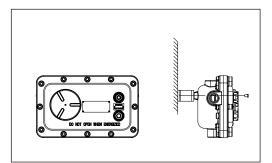


2. Select any one of the three 3/4 "NPT plugs as the interface for the cable input line.

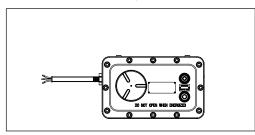


4. After installation, connect the electrical appliances that require emergency input as needed.

Ceiling Mounting

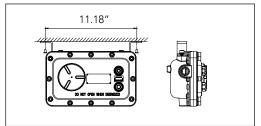

1. Drill two holes on the ceiling as fig. 1, the distance as per 9.88".

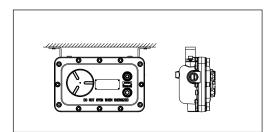


2. Select any one of the three 3/4 "NPT plugs as the interface for the cable input line.

LITELUME ©Lite Lume Corporation 2018


info@litelume.com 833.LED.LUME

Page 2/6 www.litelume.com Rev Date: 01/9/2024

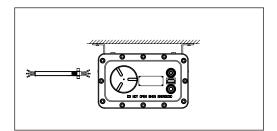

3. Remove the junction box cover (spiral cover) and insert the power cable into the junction box. Then connect the AC cable: black cable joins to L, white cable joins to N, green cable joins to grounding. Further, fill 16mm of chemical filler into the conduit and fix the conduit to the lamp body (it must be confirmed whether there are suitable gaskets before installation).

Accessories

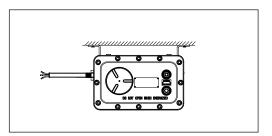


4. After installation, connect the electrical appliances that require emergency input as needed.

EM15X			
Emergency Driver Exclusive			
A	Specifications		
	Driver Model:	EM15X	
	Rated Input Voltage:	AC120-277V, 50/60 Hz	
	Input Current:	100mA max	
1	Input Power:	7W max	
	Output Voltage:	DC25-55V	
LED Lamp Automatic Emergency Battery Winey Dictate 19 Min Batter Partagenti 41 1000 Linkingry Comparison 10 1000 Linkingry	Emergency Power:	15W max (constant Current)	
	Response Time:	<550mS	
	Charge Time:	≤ 24 hours	
	Battery Capacity:	INR18650, 14.8V, 2000mAh	
	Emergency Time:	90 minutes	
	Ambient Temperature:	0°C to 60°C	
	Battery Life Expectancy:	5 years	
Features	Self-testing (Optional)		
 The emergency function will be activated when ndervoltage of mains electricity occurs. Monthly/ annual self-testing (optional) Malfunction indicate function Protections: Output open circuit and short circuit protection Battery over charge and over discharge double rotection Built-in constant current limiting circuit For LED luminaire <250W and <5A LED driver urrent Suitable for LED Emergency lighting CE, RoHS certificated Type "HL" for use in hazardous (Classified) With self-testing: With self-testing: With out self-testing: Without self-test after battery fully charged. 		ergency mode 30 seconds ency function once a month automatically enter the es to check the device time once a year (annually n, it requires human vitch 5 times to enter ery fully charged. Press the	



Indicator			
Operate Mode	LED Features	YELLOW LED (State LED	Green LED (Indicate LED)
Charge Mode:	Charging		Flash 0.2HZ (5S/time)
	Fully Charged		ON
Discharge Mode:	Discharge		Flash 1HZ (1S/time)
	Discharge Cutoff		OFF
Battery disconnect		Flash 2HZ (0.5S/time)	
LED Lamp disconnect		Flash 2HZ (0.5S/time)	
Battery under voltage		Flash 1HZ (1S/time)	
Battery over voltage		Flash 1HZ (1S/time)	
Function test beginning (once a month)			Flash 2HZ (0.5S/time), flash 5 times
Under function test	Jnder function test		Flash 1HZ (1S/time)
Function test failed		Flash 0.5HZ (2S/time)	
Discharge duration test be	eginning (once a year)		Flash 2HZ (0.5S/time), flash 7 times
Under discharge duration test			Flash 1HZ (1S/time)
Discharge duration test failed		Flash 0.5HZ (2S/time)	

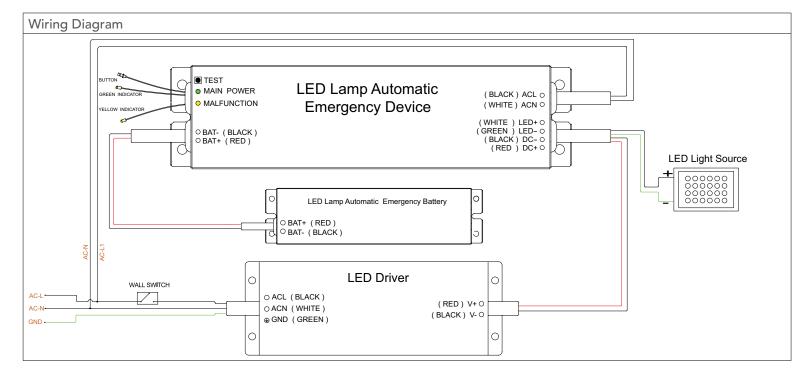



Dimensions Unit: mm -157 Black 4 Red 280 170 AC-I Red connec t to battery + AC-N Black to LED driver Blac k connec t to battery -9 Red to LED driver -Gree n to LED -D Butt on White to LED + 280 C Yellow indicator Gree n indica tor 35

/ Important Safeguards

PLEASE READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. CAUTION- This EM15X provides more than one output source of power. To reduce the risk of electric shock, disconnect both the normal and emergency power sources by turning o ffthe AC branch and disconnecting the battery on/o ffswitch.

2. CAUTION - Maintenance on this equipment should be performed only by qualified electricians.

3. CAUTION - Do not attempt to service the battery. A sealed, maintenance-free battery is used and cannot be replaced in the field. Replace the entire unit if necessary.

4. CAUTION - Use of accessories not recommended by the manufacturer may result in an unsafe condition, void the warranty, and result in failure to meet UL specifications.

5. CAUTION - Connect the EM15X(B) battery pack to the instrument before applying AC power.

6. CAUTION - The EM15X requires a non-switched AC power source of 120-277VAC, 50/60Hz. Verify the appropriate electrical ratings on the fixture LED before servicing. Both of the electrical rating will supply power under an output voltage of DC25~55V in emergency mode for at least 90 mins. (See individual units for output specifications.) Both electrical ratings provide power for at least 90 minutes at an output voltage of DC25~55V during emergency operation (see output specifications for each unit).

7. CAUTION - The battery should be charged for 24 hours every 6 months during storage.

8. CAUTION - Press the test button three times to disable emergency operation before shipping.

9. CAUTION - Before installation, make certain the A.C. power is off.

10. CAUTION - The battery in this unit may not be fully charged. A short-term discharge test may be conducted after the emergency driver has been charging for 1 hour. Charge for 24 hours before conducting a long-term discharge test.





Project Name	
Catalog #	
Job Type	
Prepared By	
Notes	

Fixture Ordering Information

Part #	Description	
LL-EBEP-GY	LED Emergency Battery Back Up Box Explosion Proof, Grey	
	* Please cont	act LITELUME for all Custom Option Requests

Accessories Ordering Information

EM15X Emergency Battery Back Up 15W Exclusive **120-277V ONLY**	Part #	Description
	EM15X Emergency Battery Back Up 15W Exclusive **120-277V ONLY**	

* Please contact LITELUME for all Custom Option Requests

Page 6/6