Strip Luminaire Adjustalume Series



riangle Warning

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- 1. To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions,
- 2. and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- 3. Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- 4. Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- 5. For the installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified
- 6. licensed electrician and check your local electrical code.
- 7. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- 8. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- 9. Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- 10. Turn off the power when you perform any maintenance.
- 11. Verify that supply voltage is correct by comparing it with the luminaire label information.
- 12. All wiring connections should be capped with UL approved wire connectors

A Caution

- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- •Risk of burn. Disconnect power and allow fixture to cool befor changing bulb or handing fixture.


NOTICE: Green ground screw provided in proper location. Do not relocate.

NOTICE: Minimum 90° supply conductors

NOTICE: Specifications and dimensions subject to change without notice.

NOTICE: Suitable for Dry or Damp location, Type IC

General Wiring Diagram

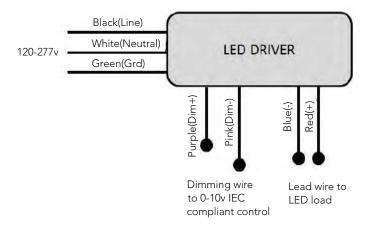


833.LED.LUME

Strip Luminaire Adjustalume Series




Surface MountInstallation Instructions


1.Take out the light fixture and accessories package from the

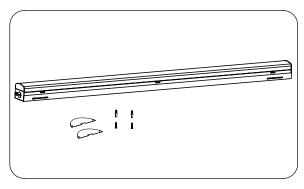


3. Open the module board down.

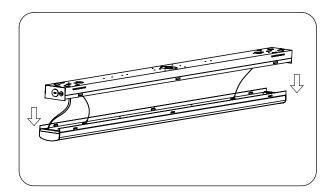


5. Wire to main power through the junction box.

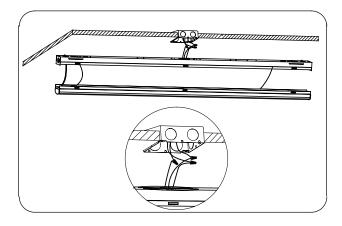


2. Fix the baffle on the lamp.

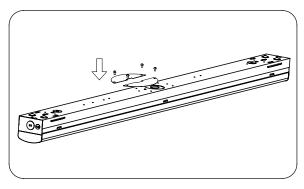

4. Fix the lamp to the ceiling with the plastic sleeve and screws provided.

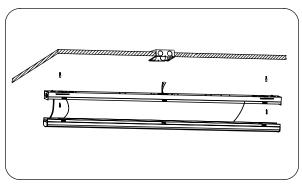

6. Assemble the module board upwards. The installation is completed.

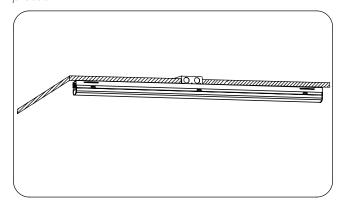


Strip Luminaire Adjustalume Series




Cable Suspended MountInstallation Instructions


1. Take out the light fixture and accessories package from the box.

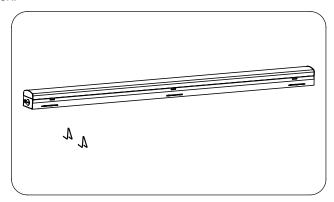


3. Connect the V-hook to the lamp.

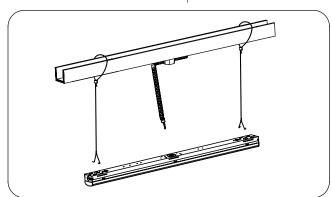


5. The installation is completed.

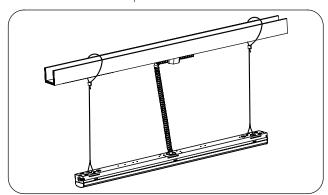

2. Attach V-hooks to the cable.

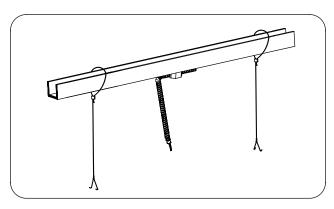

4. Connect the AC wires.

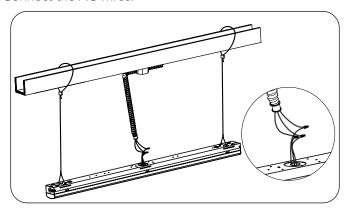


Strip Luminaire Adjustalume Series



Additional Accessories


Emergency Battery Backup

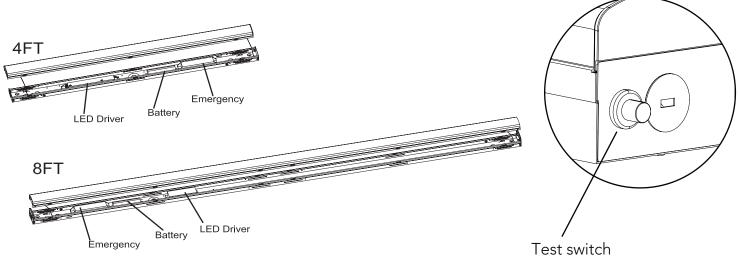


General Wiring Diagram for Emergency

If emergency CCT is 3400 and 4000K

If emergency CCT is 3500 and 5000K

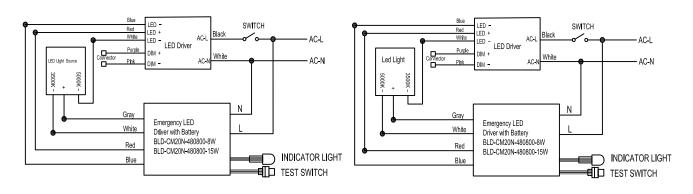

Microwave Sensor/Bluetooth

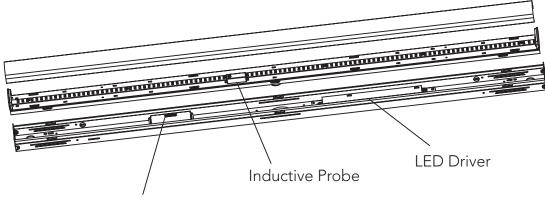


Microwave Sensor/Bluetooth


Strip Luminaire Adjustalume Series



General Wiring Diagram

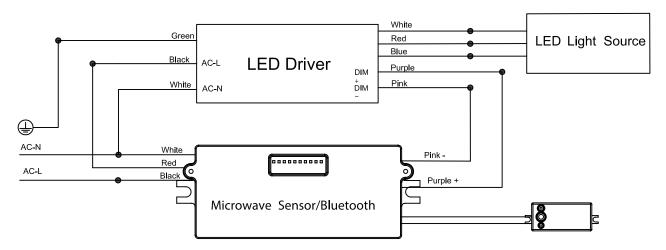

4' Field-Adjustable Wattage and CCT

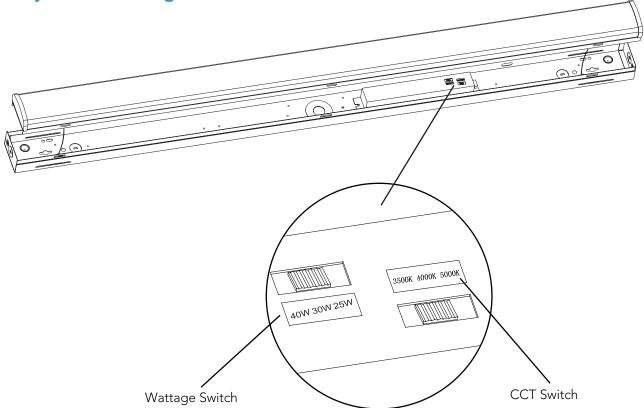


The end users may adjust the color temperature and lumen output respectively by the two DIP switch. Each DIP switch is accommodated with 3 options (left, middle and right), corresponding to 3 color temperatures and 3 Factory Settings: 5000K,90W powers respectively, which can perform the desired color temperature and lumen output combination.

Strip Luminaire Adjustalume Series



- 1.DIP switches are located onto the side of the fixture.
- 2.Select a wattage and color temperature by sliding switch left or right respectively to the desired value.

8' Field-Adjustable Wattage and CCT

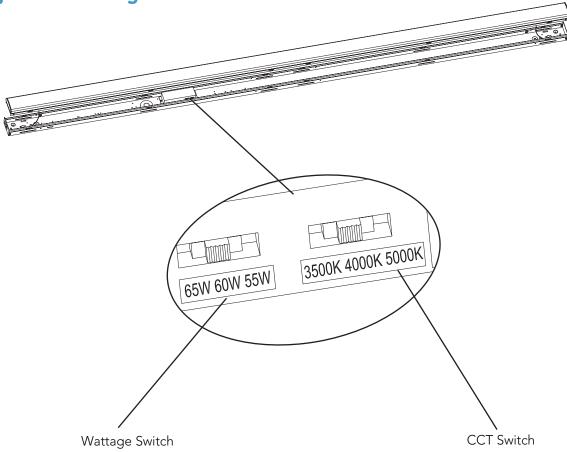

The end users may adjust the color temperature and lumen output respectively by the two DIP switch. Each DIP switch is accommodated with 3 options (left, middle and right), corresponding to 3 color temperatures and 3 Factory Settings: 5000K,90W powers respectively, which can perform the desired color temperature and lumen output combination.

- 1.DIP switches are located onto the side of the fixture.
- 2. Select a wattage and color temperature by sliding switch left or right respectively to the desired value.