
Avanta Linear Up/DownInstallation Instructions

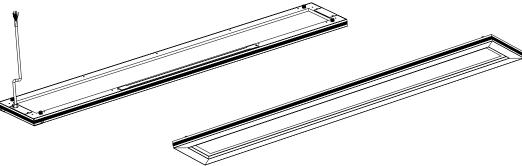

Warning

RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



Important

- 1. Read all instructions.
- 2. Install in accordance with national and local electrical code regulations.
- 3. This product is intended to be installed and serviced by a qualified, licensed electrician.
- 4. Do not install in wet locations. For dry and damp use only.
- 5. Turn off electrical power before installing or servicing fixture in any way.
- 6. To reduce the risk of fire and overheating, make sure all connections are tight.
- 7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.
- 8. Seamless continue runs per power feed:

40W: Up to 10pcs in 120V AC,20pcs in 230V AC and 25pcs in 277V AC


60W: Up to 7pcs in 120V AC,13pcs in 230V AC and 16pcs in 277V AC $\,$

80W: Up to 5pcs in 120V AC,10pcs in 230V AC and 12pcs in 277V

Attention



Wiring Diagram

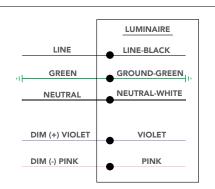


Avanta Linear Up/Down Installation Instructions




Dry Ceiling Pendant

Power Feed

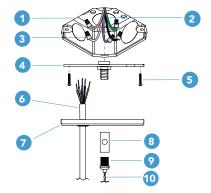

Non Power Suspension

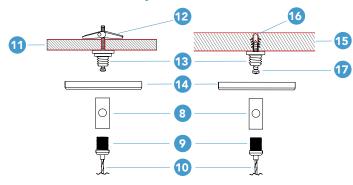

Parts List



Wire Nut



Junction Box Crossbar



Screw PM4*22



Power Cord



4" Canopy Power Feed



Cable Holder



Strain Relief Thread Nut



Aircraft Cable



Butterfly Drywall Anchor



Crimp Stud



2" Canopy



Anchor

- 4" Octogon Junction Box (By Others) Power Cord (By Others) 2 3 Wire Nut 4
 - Junction Box Crossbar
- Screw PM4*22
- Power Cord
- 0 4" Canopy Power Feed
- 8 Cable Holder
- Strain Relief Thread Nut 9
- Aircraft Cable
- Drywall Ceiling (By Others)
- Butterfly Drywall Anchor
- Crimp Stud
- 2" Canopy 14
- Solid Ceiling (By Others)
- Anchor
- Screw PA4*30




Screw PA4*30

Avanta Linear Up/Down Installation Instructions



Drop Ceiling Pendant

Non Power Suspension

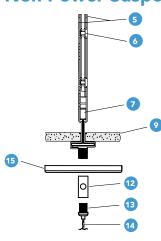

Parts List



4" Octogon Junction Box



Wire Nut



Assembled T-grid Clips



Screw 6#*4



Plastic Grommet



Power Cord



4" Canopy Power Feed



Cable Holder



Strain Relief Thread Nut



Aircraft Cable




2" Canopy

1	Armored Cable & Connector (By Others)
2	Power Cord (By Others)
3	4" Octogon Junction Box
4	Wire Nut
5	Assembled T-grid Clips
6	Screw 6#*4
7	T-grid (By Others)
8	Plastic Grommet
9	Ceiling Tile (By Others)
10	Power Cord
1	4" Canopy Power Feed
12	Cable Holder
13	Strain Relief Thread Nut
14	Aircraft Cable
15	Solid Ceiling (By Others)

Avanta Linear Up/Down Installation Instructions



Independent Pendant4FT UP/DOWN LINEAR

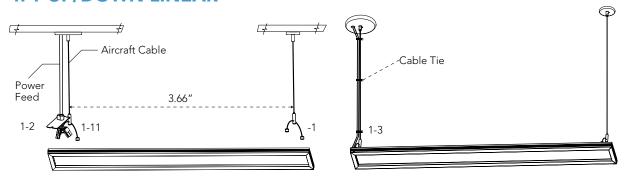



- 1-1: Screw aircraft cables clockwise on the top of luminaire.
- 1-2: Connect the quick connectors properly.
- 1-3: Zip tight power cord & aircraft suspension cable with the cable tie if needed.



Adjust the height of luminaire. Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.

6FT & 8FT UP/DOWN LINEAR

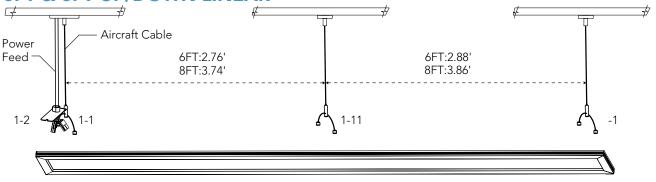


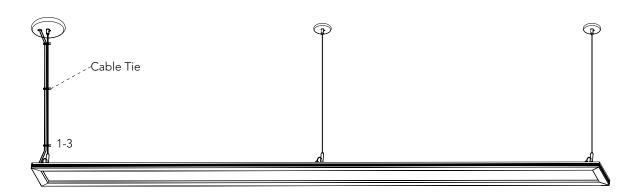

Avanta Linear Up/Down Installation Instructions



Multiple Luminaire Connection 4FT UP/DOWN LINEAR

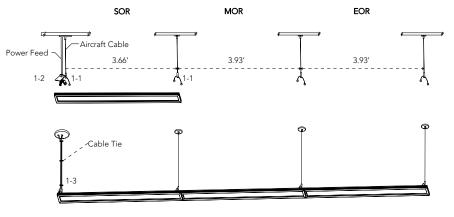

Hang Luminaire

- 1-1: Screw aircraft cables clockwise on the top of luminaires.
- 1-2: Connect the quick connectors properly.
- 1-3: Zip tight power cord & aircraft suspension cable with the cable tie if needed $\,$




Adjust the height of luminaire. Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.


Seamless Continue Runs Per Power Feed

40W: Up to 10pcs in 120V AC,20pcs in 230V AC and 25pcs in 277V AC 54W: Up to 8pcs in 120V AC,15pcs in 230V AC and 18pcs in 277V AC 80W: Up to 5pcs in 120V AC,10pcs in 230V AC and 12pcs in 277V AC


Joint Steps

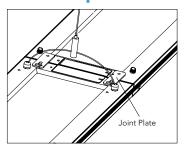

1. Joint two luminaires together by mounting the Joint plate on the both sides as shown.

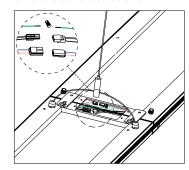

2. Remove the existing covers, then connect the quick connectors properly.

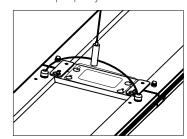

3. Mount the joint cover by screw.

6FT & 8FT UP/DOWN LINEAR

