

Emergency Battery Backup High Voltage (G3) Installation Instructions



IMPORTANT SAFEGUARDS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. To prevent high voltage from being present on the purple and blue output leads prior to installation. The LED emergency driver connector must be open. Join the unit connector after it has been installed and before the AC power is supplied
2. Make sure all connections are in accordance with the National Electrical Code or any local regulations.
3. To reduce the risk of electric shock, disconnect both normal and auxiliary power supplies and unit connector of the LED emergency driver before servicing.
4. An AC power source (100-277VAC, 50/60Hz) ahead of any wall switch is required to provide battery charging current.
5. Do not install near gas or electric heaters.
6. This product is for use with indoor or damp locations where ambient temperature is (0°C to 50°C). It is not suitable for wet. Do not use in heated air outlets, hazardous locations and outdoor.
7. For use with grounded, UL Listed, damp location rated, indoor fixtures and case should be grounding.
8. The LED emergency drivers are intended for ordinary locations and for permanent installation into one or more emergency luminaires.
9. This LED emergency driver has not been investigated for use in an air handling fixture.
10. This is a sealed unit. Integral battery is not replaceable. Replace entire unit when necessary.
11. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
12. Servicing should be performed by qualified service personnel.
13. LED emergency driver should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel. Indicator light should be mounted can see location.
14. LED emergency driver is only use for LED lighting emergency backup. Do not use it for other than its intended use.
15. The weight of the LED emergency driver should be considered before installation.
16. CAUTION - This emergency battery pack for use LED lamp or LED fixture. Suitable voltage of LED fixture is AC100-120V.

Operation

During normal operation, AC power is supplied to the AC driver through the LED emergency driver and charged the battery. The AC input line voltage (100-277V AC) of LED emergency driver automatically sets the output voltage during emergency mode.

When AC power fails, the LED emergency driver automatically switches to emergency mode, keeping the load illuminated for a minimum of 90 minutes. When AC power is restored, the LED emergency driver returns to charging mode. The LED emergency driver consists of a low-battery voltage disconnect which is reset when AC power is restored.

Installing The Emergency Driver

- The LED emergency driver will be located between the AC power sources and the AC driver as shown in wiring diagram section of instructions.
- The LED emergency driver may be installed in close proximity to the fixture or remote from the fixture.
- The maximum remote distance using 16AWG wire is 250ft. Contact the factory for more information.
- The AC power is fed to the LED emergency driver.
- The AC driver receives power from the LED emergency driver. Identify the output wires of the LED emergency

Installing The Emergency Driver

Pack Version

Method 1: Mount the LED emergency driver outside the LED luminaire with flexible conduct.

Method 2: Mount the LED emergency driver inside the LED luminaire without flexible conduct.


Method 3: Optional T-grid Hanger

Emergency Battery Backup High Voltage (G3) Installation Instructions



The T-grid hanger is safer to mount the LED emergency driver on the T-grid ceiling. It is sold separately and is available from the factory as an accessory kit. Call your local distributor or the factory for complete information

- 1-Flexible conduit (supplied) to connect AC driver wires.
- 2-Existing conduit to run existing wires to lamp holder.
- 3-AC line in.
- 4-Conduit and junction box (not supplied).

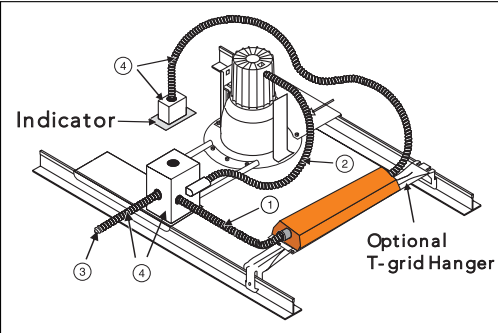


Installing The Illuminated Test Switch

Standard Indicator:

Mount the supplied indicator in a location that is visible and accessible by maintenance personnel.


- The indicator mounts through a hole which may need to be made in the luminaire or could come pre-punched by the luminaire supplier.
- Connect the indicator per wiring diagrams provided on these instructions.
- If wired correctly, the indicator light should be ON when AC power is supplied to the fixture indicating that the unit is charging.

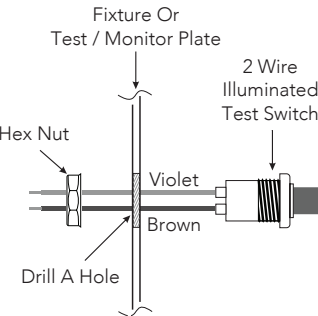

Optional Recessed Indicator:

The recessed indicator is only use for LED emergency driver with dual-flex wiring.

- Install the indicator to the opening hole onto the ceiling with the nut.
- Connect the indicator per wiring diagrams provided on these instructions.
- Closing the J-box, then finish.

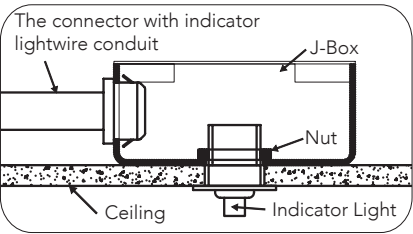

Indicator Status

LED Indicators Status	EM Driver Status/Mode
• Solid Red ON	System OK/AC OK
• None (LED OFF)	Normal working on EM mode
• Flashing Red, 1s on/1s off (cycle)	Battery voltage is too low
• Flashing Red, 0.3s on/0.3s off (cycle)	System NG;Battery not detected, check battery connection

Maintenance

Although no routine maintenance is required to keep the LED emergency driver functional, it should be checked periodically to ensure it is working.

The following schedule is recommended:

- Visually inspect the charging indicator light monthly. It should be illuminated.
- Test the emergency operation of the fixture at 30-day intervals for a minimum of 30 seconds.
- The lamp should operate at illumination.

- ## Join Connector & Apply Power

Wiring the Emergency Driver

The diagram illustrates the wiring for LED emergency lighting. It shows a **JUNCTION BOX** connected to a **DRIVER BOX** and a **LED EMERGENCY DRIVER**. The **LED EMERGENCY DRIVER** is connected to a **DIMMER** switch. The **LED Fixtures / Driver (Emergency)** are connected to the **DIMMER** switch. The **POWER** is connected to the **JUNCTION BOX**. The **OPTIONAL SWITCH** is connected to the **LED Fixtures / Driver (Emergency)**. The **DIMMER** switch has terminals for **DIM +**, **DIM -**, and **DIMMER**. The **LED Fixtures / Driver (Emergency)** has terminals for **N**, **L**, **+DIM**, and **-DIM**. The **LED EMERGENCY DRIVER** has terminals for **LED** and **EMERGENCY**. The **JUNCTION BOX** has terminals for **POWER**, **LED**, and **EMERGENCY**. The **DRIVER BOX** has terminals for **LED** and **EMERGENCY**. The **LED Fixtures / Driver (Emergency)** has terminals for **LED** and **EMERGENCY**.

Emergency Battery Backup High Voltage (G3) Installation Instructions



Wiring : If Power Of Luminaire $\leq$ power Of LED Emergency Driver.

Ensure the LED load's rated power is less than or equal to the power output of this emergency LED driver

No need to connect 0-10V dimming wires

Note: Do not connect during installation. Connect them after it has been installed and before the AC power is supplied.

