



Sensor Remote Programmer



Specifications

Power Supply:	2 x AAA 1.5V Alkaline batteries
Carrying case:	RC-100 in carrying case
Upload Range:	Up to 50ft.
Op Temperature:	0°C to 50°C
Mounting Height:	4.84" x 2.76" x 0.8"

Warning

Remove the batteries from compartment if the remote will not be used in 30 days.

Overview:

The remote control Wireless IR Configuration Tool is a handheld tool for remote configuration of IR-enabled fixture integrated sensors. The tool enables device to modify via push button without ladders or tools, and stores up to four sensor parameter modes to speed configuration of multiple sensors.

The remote control sensor setting at mounting height up to 50 feet. The device can display previously established sensor parameters, copy parameters and send new parameters or store parameter profiles. For projects wherer identical settings may be desired across a large number of areas or spaces, this capability provides a streamlined method of configuration. Settings can be copied throughout a site, or in different sites.

LED Indicators

LED	Description	LED	Description
BRIGHTNESS	High end trim turning function (To set the output level of connected lighting during occupancy)		To select the current surrounding lux value as the daylight threshold. This feature enables the fixture to function well in any real application circumstances.
SENSITIVITY	To set the occupancy sensing sensitivity of the sensor		The daylight sensor stops working, and all motion detected could turn on the lighting fixture no matter how bright the natural light is.
HOLD TIME	The time that the sensor will turn off (if you chose stand-by level is 0) or dim the light to a low level after the area is vacated	STAND-BY DIM	To set the output level of connected lighting during vacancy. The sensor will regulate the lighting output at the set level. Setting the Stand-By Dim level at 0 means light full off during vacancy.
DAYLIGHT SENSOR	This represents various thresholds of natural light for the sensor.	STAND-BY TIME	This represents the time that the sensor will keep the light at low dim level after the HOLD TIME elapsed



LED Indicators

Button	Description	Button	Description
	Press the button, the light goes to permanent on or permanent off mode, and the sensor is disabled. (MUST press button to quit this mode for setting		Press button, the sensor starts to function and all settings remain the same as the latest status before the light is switched on/off.
	Display the current/lastest setting parameters in LED indicators (the LED indicators will on for showing the setting parameters).		The button is for testing purpose sensitivity only, after you choose sensitivity thresholds, then you press button. The sensor goes to test mode (hold time is only 2 sec) automatically, meanwhile the stand-by period and daylight sensor are disabled. Press button to quit from this mode.
	Press button, all settings go back to settings of dip Switch in sensor		
	Enter in the setting condition, the parameter LEDs of remote control will flash to be selected and navigate to UP and Down for choose selected parameters in LED indicators.		Navigate to LEFT and RIGHT for choose selected parameters in LED indicators.
	Confirm the selected parameters selected parameters in remote control.		Open and close smart daylight Sensor Press or Enter in the setting condition, the parameter LEDs of remote control will flash to be selected, Press for the open or close smart daylight sensor.
	Press button, upload the current parameters to sensor(s), the LED light which the sensor connects will ON/OFF as confirm.		
	4 Scene modes with preset parameters which are available to be changed and saved in modes.		

Setting

The Setting content contains all available settings and parameters for remote sensors. It allows you to change the available control, parameters, and operation of the sensor from factory default or current parameters.

Change multiple settings of sensor(s)

1. Press button, the remote control LEDs will show the latest parameters you set.

NOTE: if you push button before, you must push button to unlock the sensor.

2. Press or enter in the setting condition, the parameter LEDs of remote control will flash to be selected, navigate to the desired setting by pressing to select the new parameters.

3. Press to confirm all settings and savings.

4. Aim at the target sensor and press to upload the new parameter, the LED light which the sensor connects will ON/OFF as confirm.

NOTE: the settings works key setup is by Push or , enter in the setting condition.

NOTE: the LED light which the sensor connects to will flash ON/OFF to confirm receiving the new parameters.

NOTE: if you press button, the remote LED indicators will show the latest parameters which were sent.



Change multiple settings of sensors with smart photocell sensor open


1. Press **DISP** button, the remote LED will show the latest parameters.
2. Press **▲** or **▼** enter in the setting condition, the parameter LEDs indicators of remote control will flash to be selected.
3. Press **⏏**, 2 LED indicators will flash in daylight sensor settings, select daylight (10 30 50) as setpoint to light on automatically, set daylight (100 300 500) as setpoint to light off automatically.
4. Press **OK** to confirm all settings and savings.
5. Aim at the target sensor and press **SEND** to upload the new parameter. The LED light which the sensor connects will ON/OFF.

NOTE: **⏏** is disabled by default.

1. Open or close the smart daylight sensor by push **⏏** when remote control is in setting condition.
1. When the smart daylight sensor open, 2 LED indicators are flash in daylight sensor setting, select daylight (10 30 50) as setpoint to light on automatically, select daylight (100 300 500) as setpoint to light off automatically. When smart daylight sensor close, 1 LED indicator is flash in the daylight sensor setting for choose daylight sensor threshold.
3. When the smart daylight sensor open, the stand-by time is only **+∞**.
4. Smart daylight sensor takes place of normal photocell sensor and works independently.
5. See **Daylight Sensor Function**.

Corridor Function

3 levels of the light control: 100%--dimming light (0%, 10%, 30%, 50%) --off, 2 selectable delayed wait time: motion hold stand-by time, Selectable daylight threshold

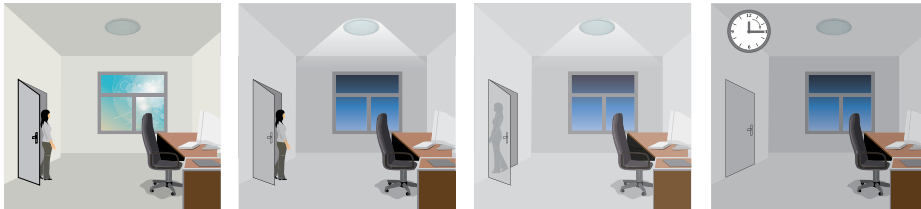

With sufficient natural light, the light does not switch on when presence is detected


With insufficient natural light, the sensor switches on the light automatically when presence is detected

After hold-time, the light dims to stand-by level if the surrounding natural light is below the daylight threshold.

Light switches off automatically after the stand-by period elapses

Daylight Sensor Function

Open the smart photocell sensor by pushing **⏏** when the remote control is in setting mode.

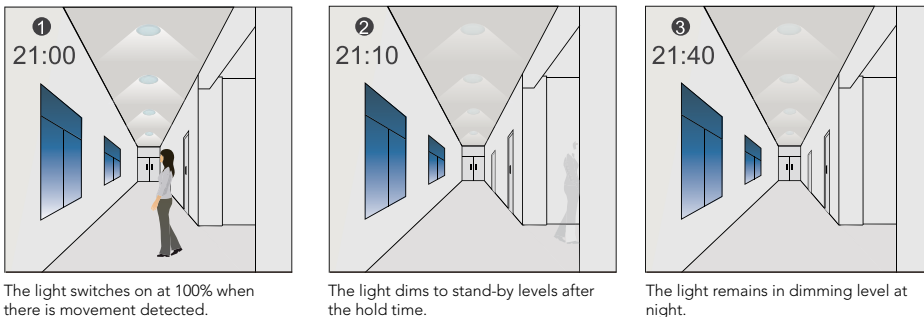


The light switches on at 100% when there is movement detected.

The light dims to stand-by levels after the hold time.

The light remains in dimming level at night.

1 ↔ **3** goes in cycle at night...
100% on when movement detected, and dims to 10% in long absence.

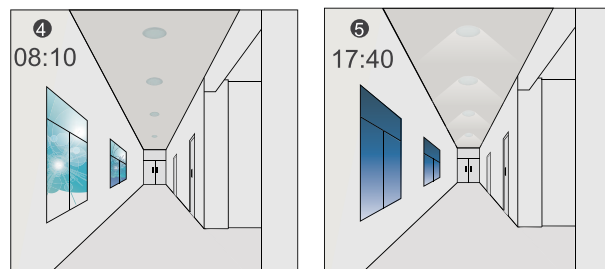


When natural light levels exceed setpoint off to light, the light will turn off even if the space is occupied.

The light automatically turns on at 10% when natural light is insufficient (no motion)

Settings on this demonstration:

- Hold-time: 30mins
- Setpoint On: 50lux
- Setpoint Off: 300lux
- Stand-by Dim: 10%
- Stand-by period: +∞
- (When the smart photocell sensor open, the stand-by time is only +∞)

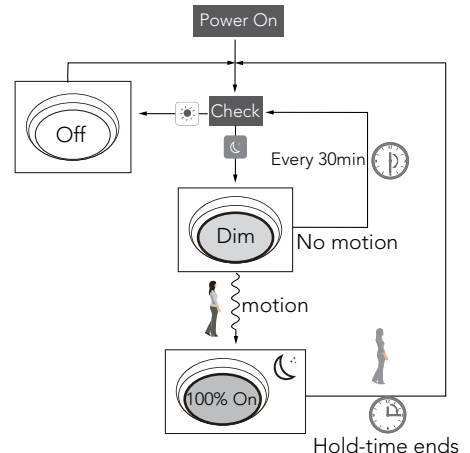



Project Name	
Catalog #	
Job Type	
Prepared By	
Notes	

Corridor Function VS Daylight Sensor Function

1. In corridor function, turn on the light MUST by natural light level lower daylight sensor setting and occupancy. In smart daylight sensor function, turn on the light by natural light level lower daylight setpoint to light on even if vacancy.
2. In corridor function, turn off light by stand-by time finish if vacancy. In smart daylight sensor function, turn off the light by natural light level higher than daylight setpoint to light off even if occupancy.
3. In smart daylight sensor function, natural light level lighter/lower than daylight setpoint to light OFF/ON MUST keep at least 1 min, that will turn OFF/ON the light automatically.

About RESET and MODE (1,2,3,4)

The remote control comes with 4 Scene MODES which are not default. You may make desired parameters and save as the new MODE (1,2,3,4) to configure the installed sensors.

RESET: all settings go back to settings of DIP Switch in sensor.

SCENE MODES (1,2,3,4)

Application	Scene Options	Brightness	Detection Area	Hold Time	Stand-by Time	Stand-by Dim Level	Daylight Sensor
Indoor	Mode 1	100%	75%	5min	30min	30%	
Indoor	Mode 2	100%	75%	1min	+∞	30%	
Indoor	Mode 3	100%	75%	5min	30min	30%	30LUX
Outdoor	Mode 4	100%	75%	1min	+∞	30%	(30LUX/300LUX)

Change the MODES:

1. Press / / / button, the remote control LED indicators show existing parameters.
2. Press / / / to select the new parameters.
3. Press to confirm all parameters and saving in the mode.

Upload

The upload function allows you to configure the sensor with all parameters in one operation. You may select CURRENT SETTING parameters or the MODE for uploading. Current setting parameters or the MODE are displayed in Remote control.

Upload the current parameters to sensor(s), and duplicate the sensor parameters from one to another

1. Press button or / / / , all parameters are displayed in Remote control.

NOTE: check if all parameters are correct, if not, change them.

2. Aim at the sensor and press button, the light that sensor connects will be ON/OFF as confirm.

RESET: if other sensors need same parameters, just aim at the sensor and press button.

Ordering Information

Part #	Description
RC-100	Remote Control 100